

INSTRUKCJA MONTAŻU / INSTALLATION INSTRUCTIONS

PRZYGOTOWANIE PRZED MONTAŻEM / BEFORE ASSEMBLY

PL - Odległość paneli od ściany (dylatacja) powinna być minimum 8 mm.
 - Stosowanie dylatacji – dylatacja progową należy stosować w przypadku powierzchni posadzki powyżej 100 m² na jednej płaszczyźnie lub jeśli jeden z boków posadzki przekracza 12 m w linii prostej.
 - Podłogi Luxury Floor SPC mogą być instalowane na posadzki z ogrzewaniem podłogowym. Maksymalna temperatura powierzchni nie powinna przekroczyć 27°C.
 - Rolki podkładu złączyć ze sobą specjalnie do tego przeznaczoną taśmą.
 - Możliwe jest przyklejenie paneli do podłoża przy użyciu klejów odpowiednich do SPC.

EN - The distance between the panels and the wall (expansion joint) should be at least 8 mm.
 - Use of expansion joints - threshold expansion joints should be used if the floor area exceeds 100 sq. m. in one plane or if one side of the floor exceeds 12 m in a straight line.
 - Luxury Floor SPC can be installed on floors with underfloor heating. The maximum surface temperature should not exceed 27°C.
 - The rolls of underlay should be joined together with a specially designed tape.
 - Gluing panels to surface is possible when using SPC specialised glues.

AREA = (A x B) + 20%

max. 27°C


max. 1mm

48h

UNDERLAY SPC 1200

PANEL B **PANEL A**

SCHEMAT MONTAŻU PODŁOGI / FLOOR ASSEMBLY PATTERN

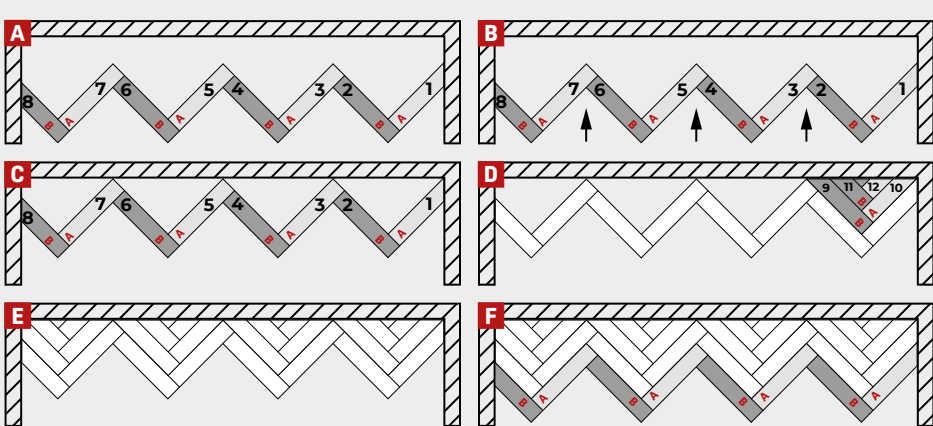

MONTAŻ KROK PO KROKU / STEP-BY-STEP ASSEMBLY

1 Preparation of panel A, 45° angle.

2 Inserting panel A into the groove of panel B.

3 Locking the panels together.

4 Panel A is placed on the floor, 8mm gap from the wall, 45° angle.

5 Panel B is placed on the floor, 8mm gap from the wall.

6 Locking panel B to panel A.

7 Hammering the panels into place.

8 Panel A is placed on the floor, 8mm gap from the wall.

9 Panel B is placed on the floor, 8mm gap from the wall.

10 Locking panel B to panel A.

11 Measuring the distance x.

12 Panel B is placed on the floor, 8mm gap from the wall.

13 Panel A is placed on the floor, 8mm gap from the wall, 45° angle.

14 Locking panel A to panel B.

15 Panel B is placed on the floor, 8mm gap from the wall.

16 Panel A is placed on the floor, 8mm gap from the wall, 45° angle.

17 Locking panel A to panel B.

18 Panel B is placed on the floor, 8mm gap from the wall.

19 Panel A is placed on the floor, 8mm gap from the wall, 45° angle.

20 Locking panel A to panel B.

21 Panel B is placed on the floor, 8mm gap from the wall.

22 Panel A is placed on the floor, 8mm gap from the wall, 45° angle.

23 Locking panel A to panel B.

24 Panel B is placed on the floor, 8mm gap from the wall.

25 Panel A is placed on the floor, 8mm gap from the wall, 45° angle.

26 Locking panel A to panel B.

27 Panel B is placed on the floor, 8mm gap from the wall.

28 Panel A is placed on the floor, 8mm gap from the wall, 45° angle.

29 Locking panel A to panel B.

KONSERWACJA / MAINTENANCE

✓ Sweep and mop with water.

✗ Do not use steam mops or harsh chemicals.

✓ Use FLOOR cleaner.

✗ Do not use OIL or WAX.

✗ Do not use POLISH.

✗ Do not use furniture pads or mats.